




CO9001A

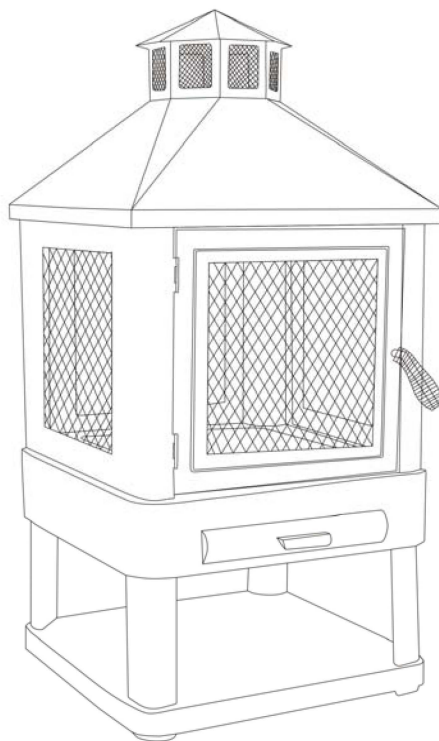

INSTRUCTION MANUAL

ASSEMBLY INSTRUCTION

VILLA FIRE PIT

WARNINGS:


- This fire pit is intended for outdoor use only. DO NOT use on wooden decks.
- The metal may become very hot during and after use. DO NOT touch the metal or try to move the unit while hot.
- Do not use near flammable or combustible objects or materials.
- It is intended to burn wood logs only. DO NOT overload the unit with fuel.
- Do not burn coal, leaves or other combustible materials in the fire pit.
- Not for use by children. Keep children & pets away from the fire pit.
- Never leave burning fire pit unattended.
- Always extinguish fire thoroughly before leaving the fire pit.
- It can reach extreme temperatures and cause injury to an unprotected hand.
- Be careful, DO NOT touch any part of hot fire pit with bare hands when using.
- Please use poker, appropriate heat-resistant glove or pad when handling.
- Keep a certain distance way from the fire pit during using.

PARTS LIST:

NO.	Parts	Qty.
A	Rain cap	1
B	Hood	1
C	Back screen	1
D	Right screen	1
E	Left screen	1
F	Door screen	1
G	Bowl	1
H	Handle	1
I	Bracket	1
J	Ash pan	1
K	Ash pan orbit	2
L	Leg	4
M	Base	1
N	Poker	1

HARDWARE LIST:


NO.	Hardware	Qty.
AA	M6 * 10 Bolt 	30
BB	M6 Nut 	1

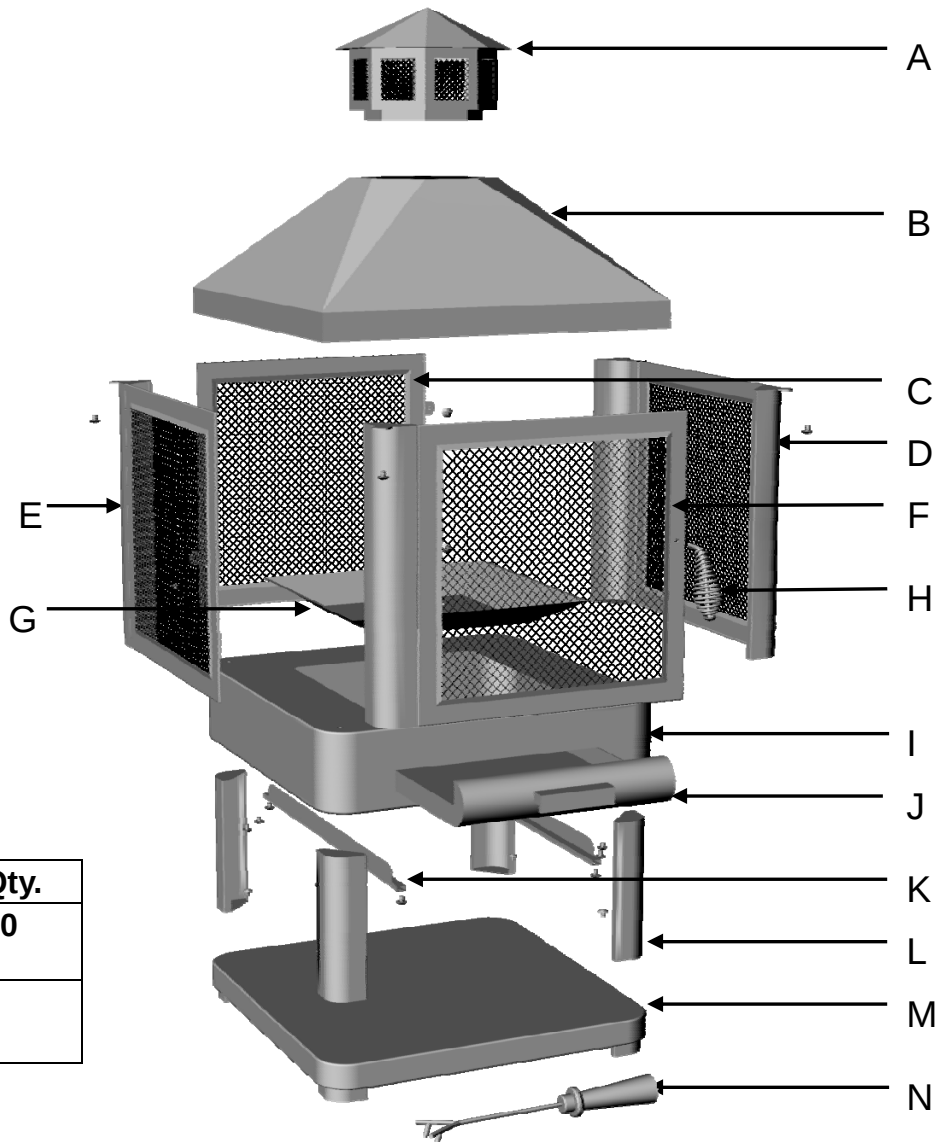


Tools required: Screw driver (not included)

ASSEMBLY STEPS:


STEP 1: Place the Base (M) on level location and then connect 4 Legs (L) to the Base (M) by using M6 * 10 Bolt (AA).

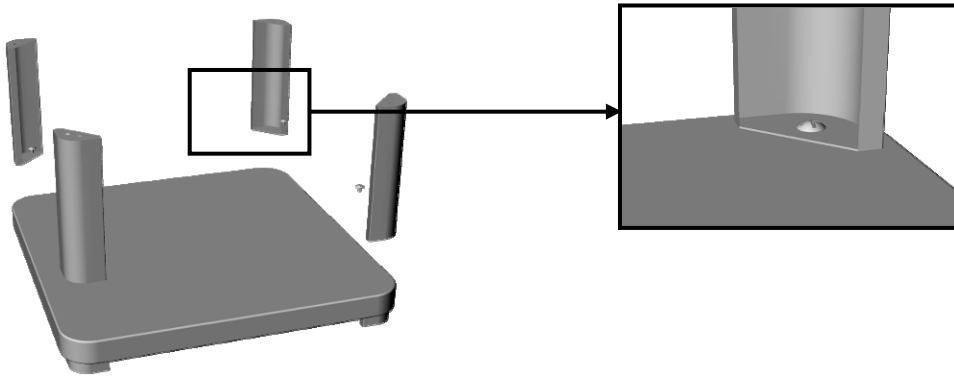


STEP 2: Reverse the Bracket (I) and then connect the Ash pan orbit (K) to the Bracket (I) by using M6 * 10 Bolt (AA).

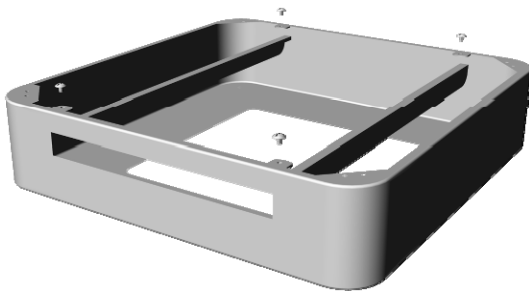


STEP 3: Connect 4 Legs (L) with the Bracket (I) by using M6 * 10 Bolt (AA).

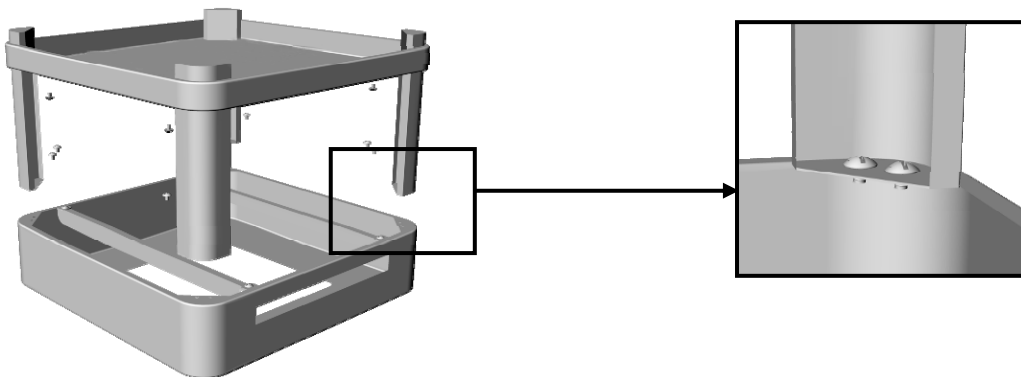


STEP 4: Turn the Base (M) with Bracket (I) in the upright position, connect Left screen (E) and Right screen (D) to the Bracket (I) with M6 * 10 Bolt (AA). **DO NOT TIGHTEN THE BOLTS FULLY.**

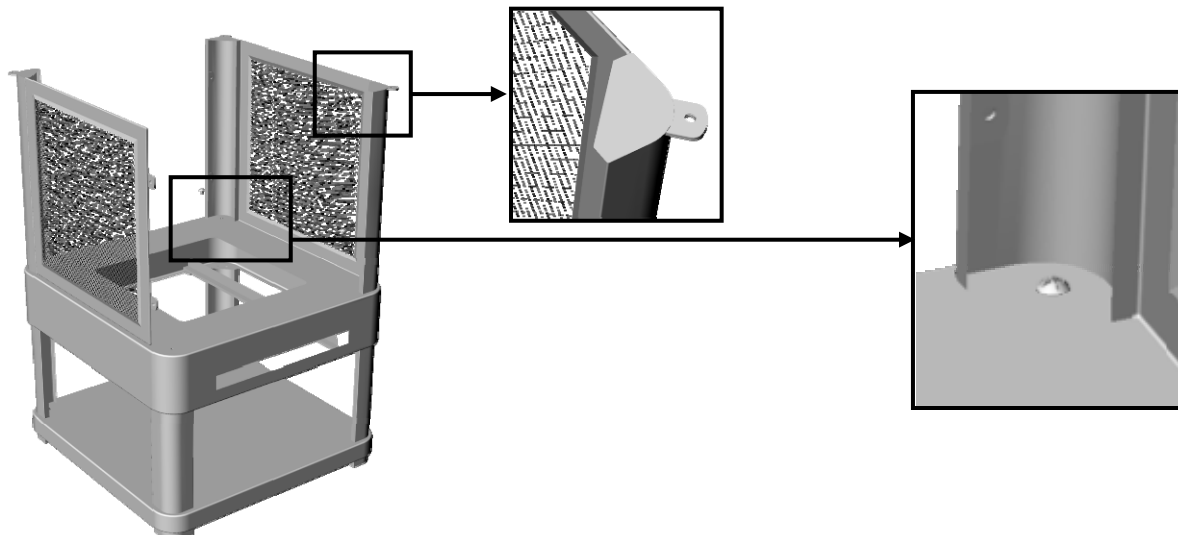


STEP 5: Connect Back screen (C) to the Left screen (E) and Right screen (D) with M6 * 10 Bolt (AA), connect Door screen (F) to Left screen (E) and Bracket (I) with M6 * 10 Bolt (AA). **TIGHTEN ALL BOLTS FULLY.**

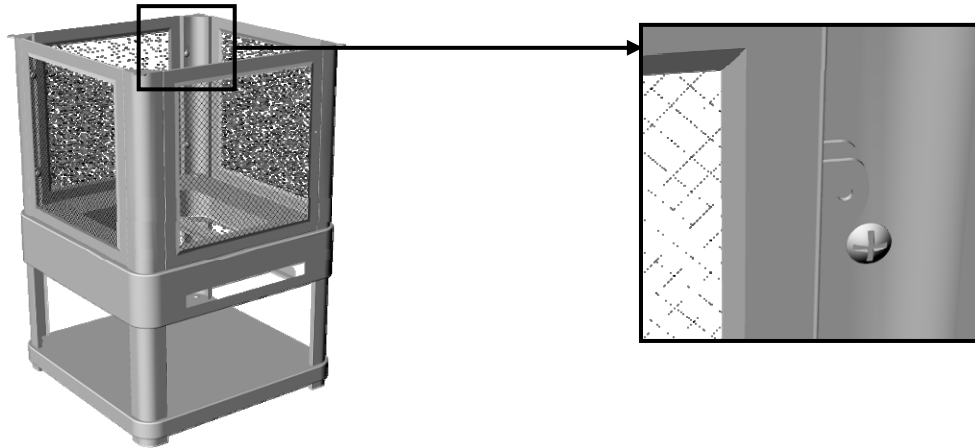

STEP 6: Connect the Hood (B) to all screen by using M6 * 10 Bolt (AA).

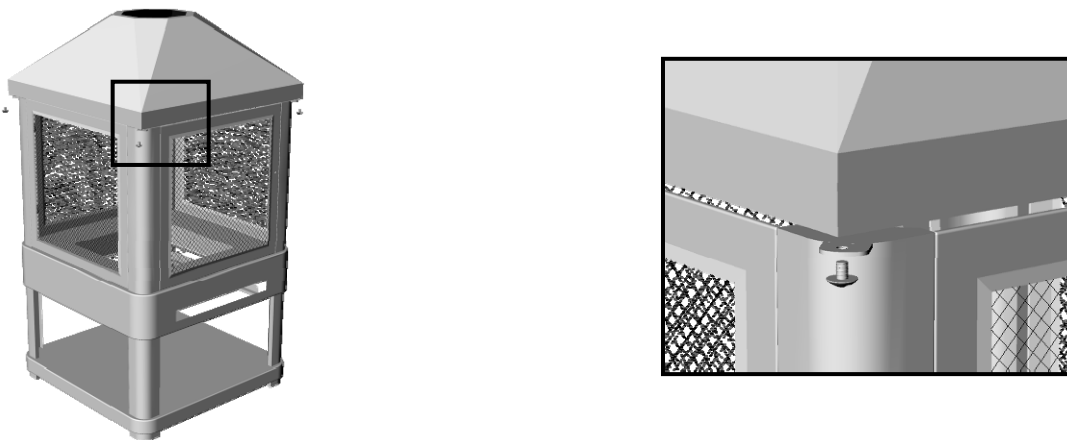

STEP 7: Insert the Handle (H) into the hole in the Door screen (F) using M6 Nut (BB).

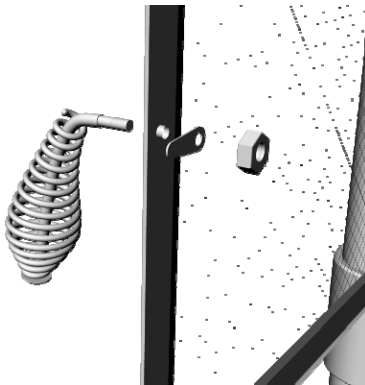

STEP 8: Place the Rain cap (A) on the Hood (B), place the Bowl (G) and Ash pan (J) into the fire pit.



Now the fire pit is ready for use.



Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.