


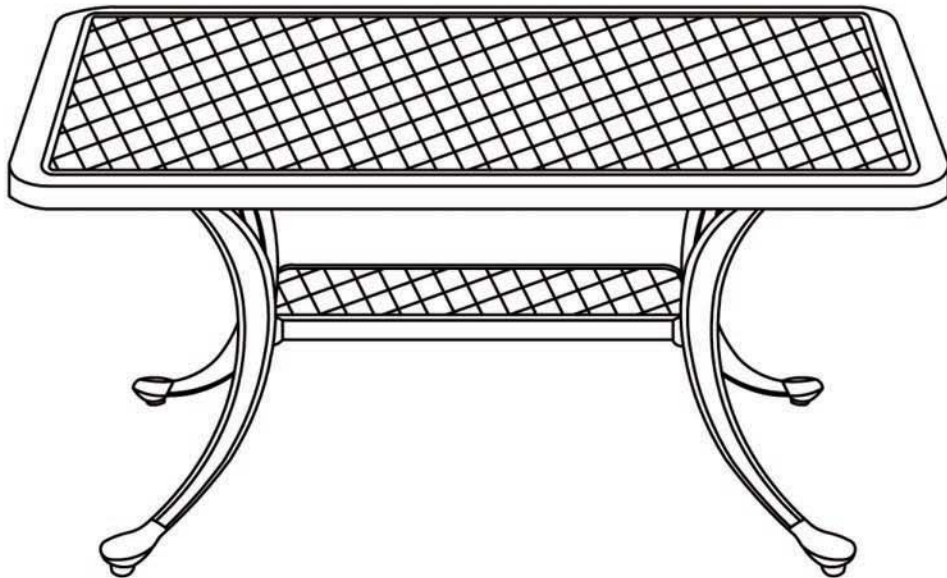

CAST ALUM. RECT COFFEE TABLE
CO6201-BK





Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.


 
 
Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale.

Should you experience any damaged, defective, or missing parts, or need help with assembly, please call us directly before contacting the retailer.







Our customer service agents are available 8 AM to 8 PM (EST) Monday through Friday at **800-815-4796** or for support online, visit our "Contact Us" page at www.CrosleyFurniture.com


Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. TO clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

PARTS LIST

A 	B 	C 
Leg 4 PCS	Top 1 PC	Stretcher 1 PC

HARDWARE LIST

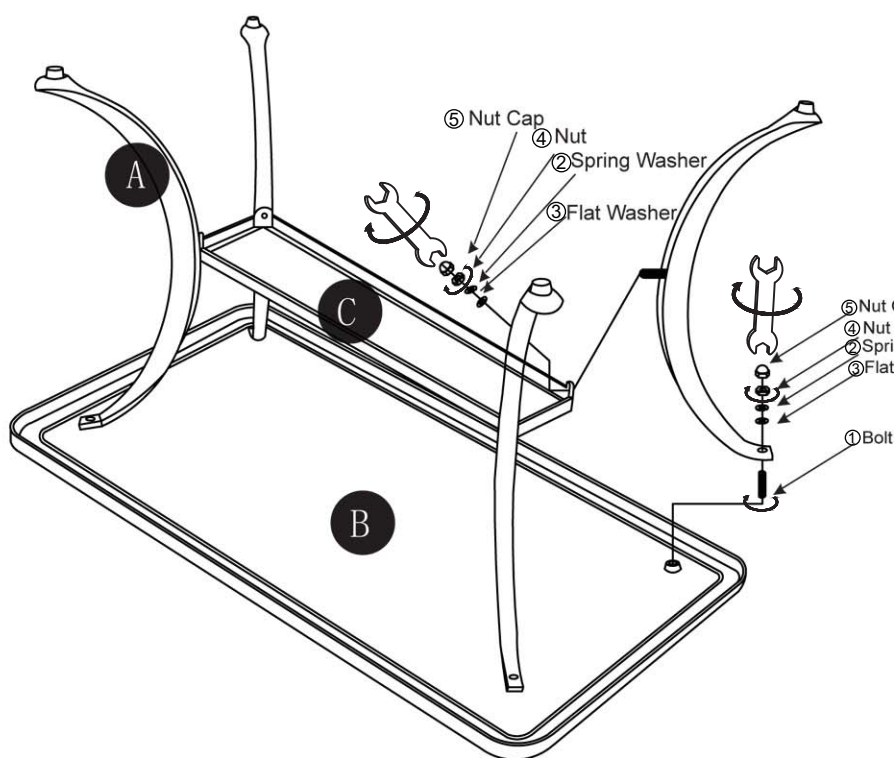


1 	2 	3 	4 	5 
Cylinder Bolt (M8*35) 4PCS	Spring Washers (M8) 8 pcs.	Flat Washers (M8) 8 pcs.	Nuts (M8) 8 pcs.	Nut Caps (M8) 8 pcs.
6 				
Wrench (M6 &M8) 1 PC				



Step 1: Place Top (B)
upside down on a soft cloth.

Insert all Cylinder Bolts(Part #1) into
the pre-drilled holes of Top (B).

Step 2: Attach two adjacent Legs (B)
by inserting the Cylinder Bolts (Part #1)
through the holes in Legs (A) by fitting
the leg on top of the attached cylinder
bolt. Secure the Legs (B) using Flat
Washers (Part #3), Spring Washers
(Part #2), and Nuts (Part #4).
Note - -Tighten the Nuts (Part #4) only
half way at this time using
wrench (Part #6).

① Bolt		x 4
② Spring Washer		x 8
③ Flat Washer		x 8
④ Nut		x 8
⑤ Nut Cap		x 8

Step 3: Attach Stretcher (C) to the two
attached Legs (A) with Flat Washers
(Part #3), Spring Washers (Part #2),
and Nuts (Part #4).
Note - -Tighten the Nuts (Part #4) only
half way at this time.

Attach the other two legs (B) to the
Top (B) & Stretcher (C) using the
same method as the first two legs.
Tighten all Nuts (Part #4) completely.

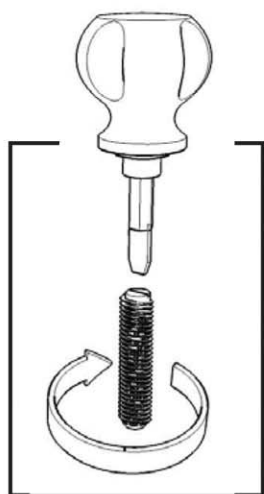


Figure 1

Flathead screw
driver(not included)

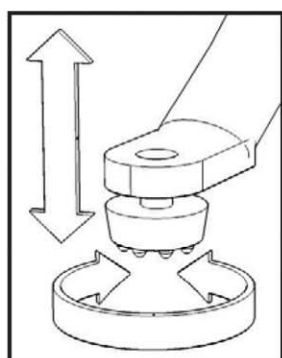


Figure 2

Step 4: Cover all Nuts (Part #4) with
Nut Caps (Part #5). Turn the table
over to the upright position. Adjust
the levelers on the bottom of the legs
to level the table.



Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale.

Should you experience any damaged, defective, or missing parts, or need help with assembly, please call us directly before contacting the retailer.

Our customer service agents are available 8 AM to 8 PM (EST) Monday through Friday at **800-815-4796** or for support online, visit our "Contact Us" page at www.CrosleyFurniture.com

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state. In accordance with the "Moss-Magnuson Warranty Act" of July 10th, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.