


Outdoor Wicker Rocking Chair CO7166

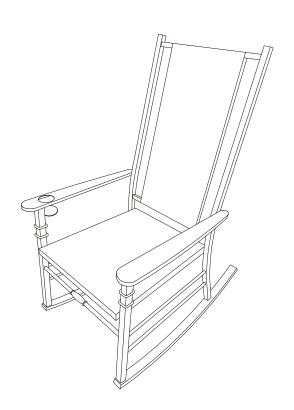

PART LIST


A	В	С	D	E
Right Arm Panel 1 PC	Left Arm Panel 1 PC	Back Panel 1 PC	Seat Panel 1 PC	Stretcher 1 PC

HARDWARE LIST

#1	#2	#3	#4
M6*15mm	M6*40mm	M6mm	M6mm
Short Bolt 6 PCS (Extra 1)	Long Bolt 2 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)	Allen Wrench 1 PC


Step 1. Lay right arm panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach back panel (part C) to right arm panel (part A) using short bolts (part #1), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

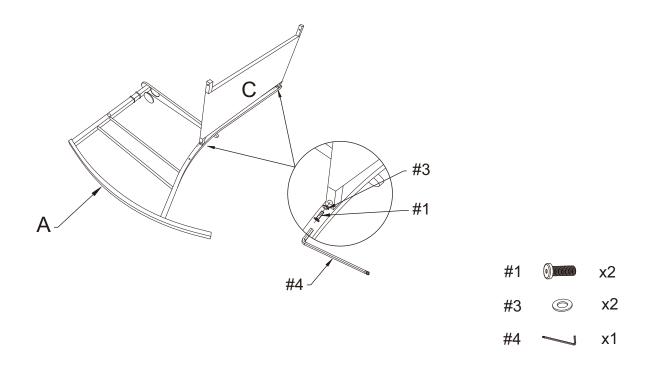


Step 2. Attach seat panel (part D) and stretcher (part E) to right arm panel (part A) using short bolt (part #1), long bolt (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

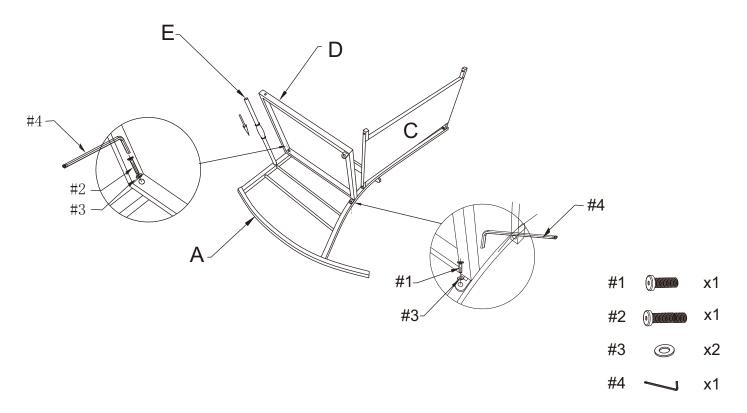

Step 3. Attach left arm panel (part B) to assembled unit (parts A, C, D, & E) using short bolts (part #1), long bolt (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

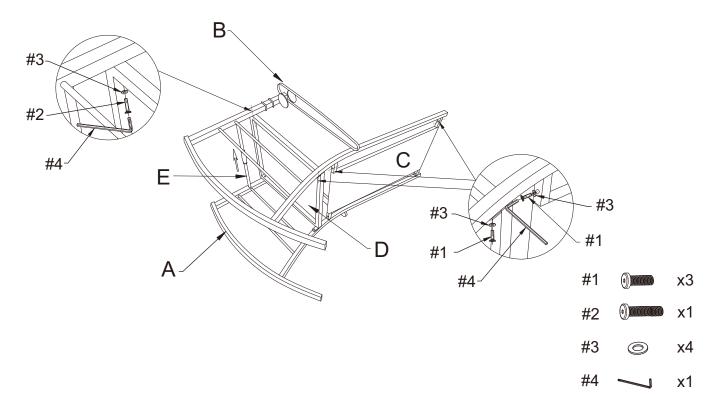

Step 4. Carefully turn unit upright on a flat surface.

