



AMERICAN MADE FURNITURE

FARMHOUSE MEDIA STAND



Thank you for purchasing our Farmhouse Media Stand. Assembly of this product requires a Phillips screwdriver and a hammer. We have found it helpful to have a second person present in at least one step of the assembly.

STEP 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

STEP 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface (like the carton or carpet) to prevent damage to the finish.

STEP 3

Identify all parts using diagram at right.



PARTS

- (1) Top Assembly (A)
- (2) Side Assemblies (B)
- (2) Doors (C)
- (2) Dividers (D)
- (1) Bottom Shelf (E)
- (1) Adjustable Shelf (F)

STEP 4


Identify and count hardware using diagram at right.

Assembly of this product requires a Phillips screwdriver and a hammer. We have found it helpful to have a second person present in at least one step of the assembly.



STEP 5


Attach Magnetic Catch to Divider (D) using two Magnet Catch Screws. **Repeat step for other divider.**

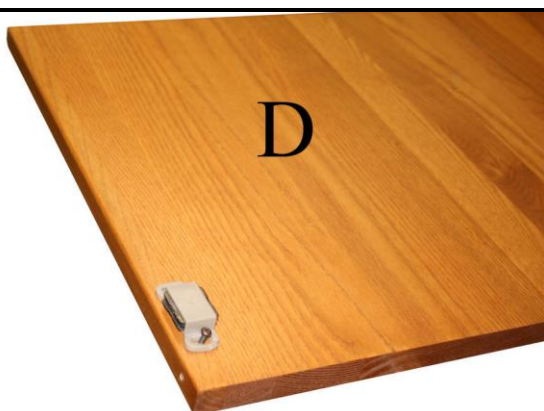

STEP 6

Lay Top (A) with cleats facing up on non-abrasive surface (carton or carpet). Attach Divider (D) to top cleats using (2) 1-1/4" #8 Screws inserting them through the outside of the cleat then into the predrilled holes on the edge of the divider.


Repeat same step for the other divider.

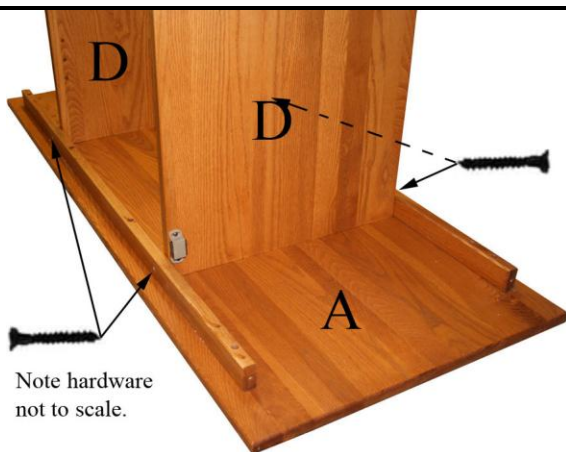

STEP 7

Mount one Catch Plate to the back of each Door (C) using one 1/2" #5 Catch Plate Screws.


Attach Door Pulls by inserting 1-1/4" #10 Screws through backside of door into the Door Pulls.

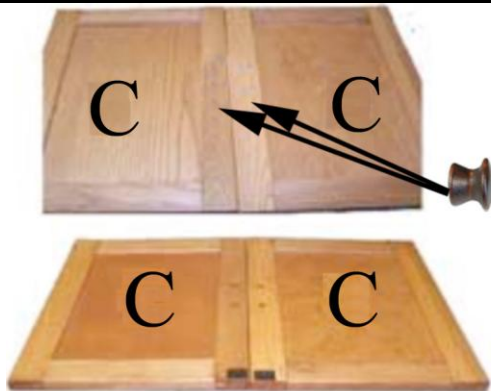

STEP 8


Insert two 1/8" x 1" steel hinge pins into predrilled holes in bottom of the top cleat. Align hinge pin with predrilled hole in bottom of left door. Make sure Catch Plates are to the bottom so they match up to the Magnet Catch.

Repeat for the right door.

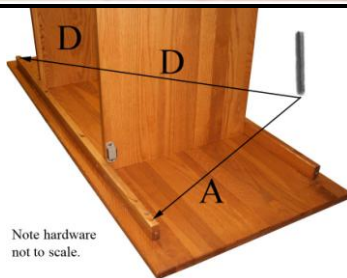


STEP 9

Insert one 1/8" x 1" steel hinge pin in top of both doors and place two washers over each of the pins.

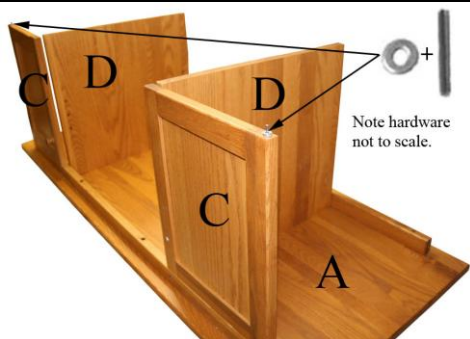


STEP 10

Place Bottom Shelf (E) with cleats facing up on top of unit making sure to align the hinge holes with the hinge pins. Tap into place.

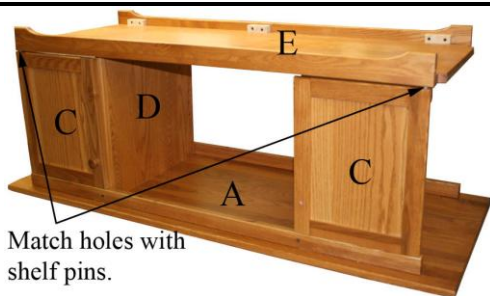

STEP 11


Insert four 1 1/4" #8 screws in bottom of shelf and insert them into predrilled holes in bottom of right and left dividers. Tighten screws.

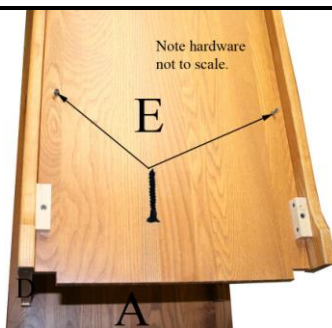

STEP 12

Align Side Assembly (F) up to the cleats on the top and bottom shelf. Insert four 2" #8 screws and screw them into predrilled holes in the cleats. Tap wood plugs into place to cover screws.


Repeat with Side Assembly to other side.

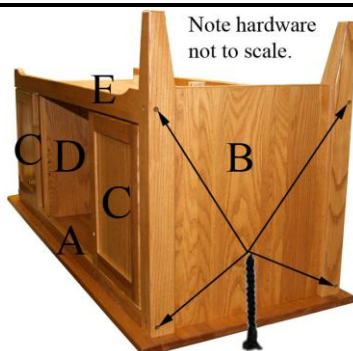

STEP 13

Turn unit right side up and insert the four brass shelf pins into the predrilled holes inside the cabinet. Make sure the flat side of pin is facing up. Align the grooves in the Cabinet Shelf (G) and Removable Shelves (H) to lay flat on the shelf pins.

With a hammer, lightly tap flush plugs into Side Assemblies where screws were inserted earlier.

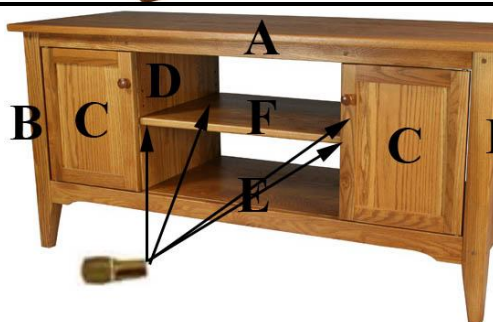

CARE

Dust as needed with a soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigments or silicone.



AMERICAN MADE FURNITURE

www.manchesterwood.com
Product Support 1-800-660-6930
