



AMERICAN MADE FURNITURE

SHAKER ENTERTAINMENT CONSOLE



Thank you for purchasing our Shaker Entertainment Console. Assembly of this product requires a Phillips screwdriver and a 7/16 or adjustable wrench. We have found it helpful to have a second person present in at least one step of the assembly.

STEP 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

STEP 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface (like the carton or carpet) to prevent damage to the finish.

STEP 3

Identify all parts using diagram at right.

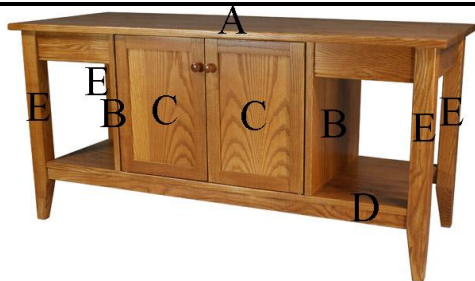

PARTS

Top Assembly (A)

(2) Dividers (B)

(2) Doors (C)

Bottom Assembly (D)


(4) Legs (E)

Cabinet Shelf (F) (Not Pictured)

STEP 4

Identify and count hardware using diagram at right.


Assembly of this product requires a Phillips screwdriver and a 7/16 or adjustable wrench. We have found it helpful to have a second person present in at least one step of the assembly.

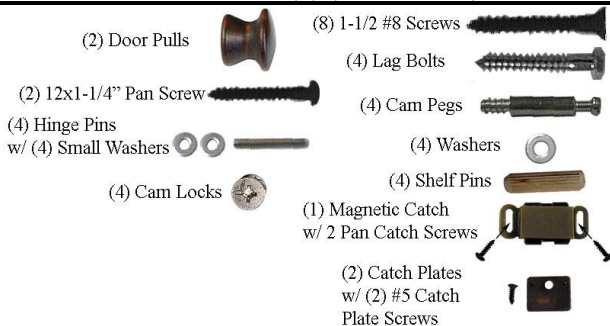

STEP 5

Lay Top Assembly (A) with cleats facing up on non-abrasive surface (carpet or carton). Mount the magnet to cleat using two pan head screws provided. This is the front of unit.


Holes designate front of unit.

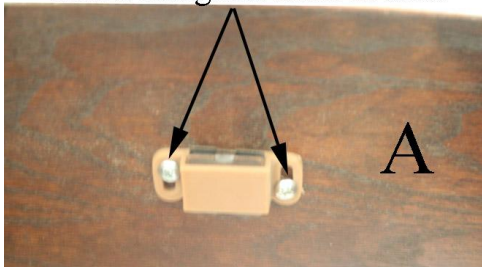

STEP 6

Attach Divider (B) to cleat of Top Assembly (A) ensuring shelf holes are facing to the inside of the unit, by inserting 1-1/2" #8 screws through the predrilled holes and into the cleat of the Top Assembly.


Repeat for the other divider.

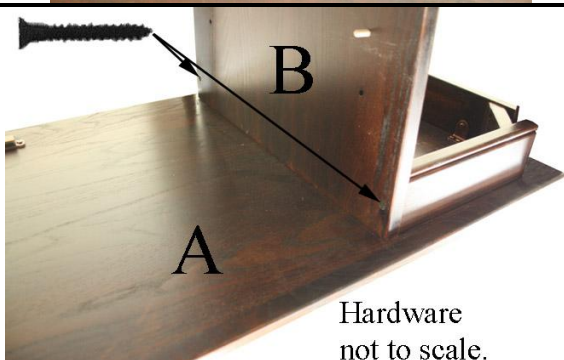

Hardware
not to scale.

STEP 7


Mount one catch plate to the back of each Door (C) using $\frac{1}{2}$ " #5 screws. Attach door pulls by threading (1) 12x1- $\frac{1}{4}$ " Pan Screw through side with catch plates and tightening the door pull onto the other side.

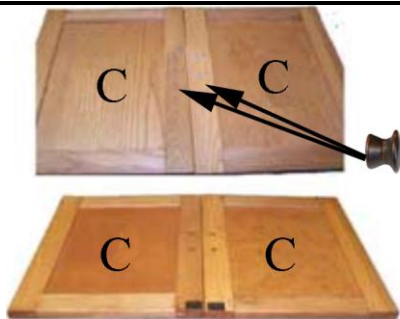

STEP 8


Insert two $\frac{1}{8}$ " x 1" steel hinge pins into predrilled holes in cleat. Align hinge pin with predrilled hole in bottom of left door. Make sure magnet plates are to the bottom so they match up to the magnet.

Repeat for the right door.

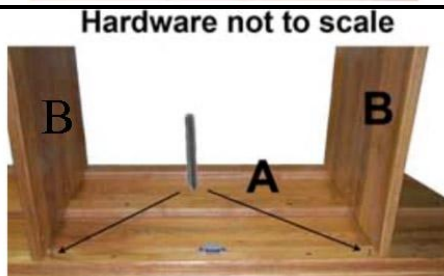


STEP 9

Insert one $\frac{1}{8}$ " x 1" steel hinge pin in top of both doors and place two washers over the pins.

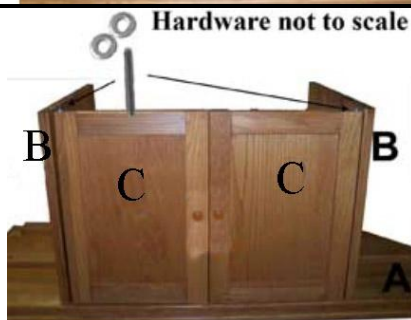


STEP 10

Place Bottom Assembly (D) with cleats facing up on top of unit making sure to align the hinge holes with the hinge pins. Tap into place.

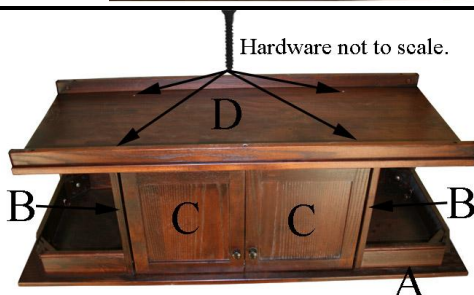

STEP 11


Insert four 1 $\frac{1}{2}$ " #8 screws in bottom of shelf and insert them into predrilled holes in bottom of dividers. Tighten screws.

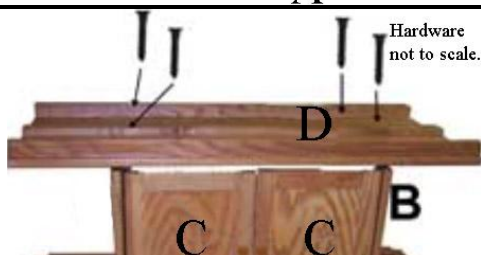

STEP 12


Insert four camlocks into holes in the skirts on the bottom of Bottom Assembly (D) with arrows on camlocks pointing out towards the end of the skirt. Insert the four cam pegs into the bottom holes of the four Legs (E) with a Phillips screwdriver.

Attach Leg (E) to Bottom Assembly (D) by inserting cam peg into hole in the end of the skirt. Secure by turning cam locks at least 1/2 turn clockwise with Phillips screwdriver.
Repeat for each Leg (E).

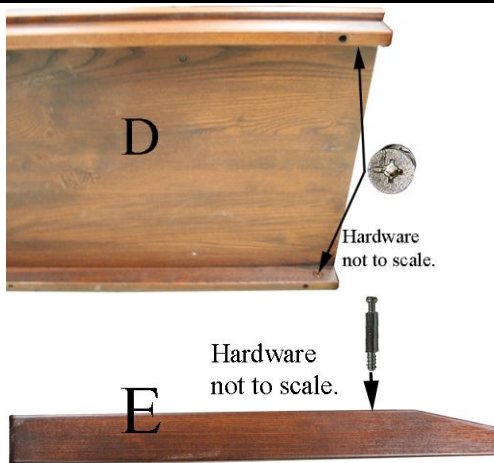


STEP 13

Secure Legs (E) by inserting Lag Bolt through corner brace of Top Assembly (A) and into the hole on the corner edge of Leg (E). Repeat for each Leg.

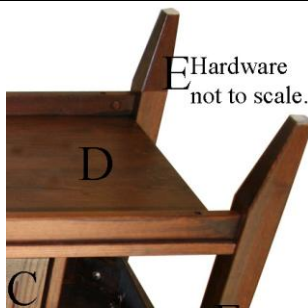

STEP 14

Turn unit right side up and insert the four brass shelf pins into the predrilled holes inside the cabinet. Make sure the flat side of pin is facing up. Align the grooves in the Cabinet Shelf (F) to lay flat on the shelf pins.

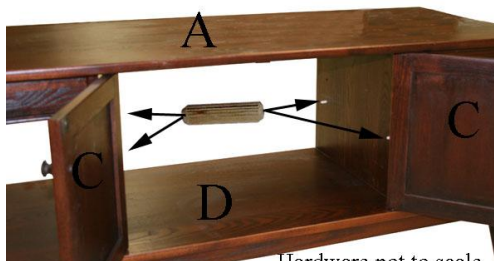

CARE

Dust as needed with a soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigments or silicone.



AMERICAN MADE FURNITURE

www.manchesterwood.com

Product Support 1-800-660-6930
