




All Weather Furnishings

Assembly Instructions

Model: CDB24

- (1) Seat
- (1) Back
- (2) Sideframes
- (1) Hardware pack


TOOLS NEEDED

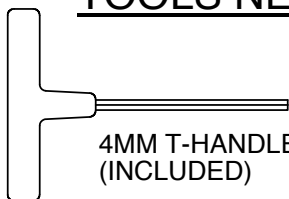

4MM T-HANDLE HEX KEY
(INCLUDED)


Step 1

Attach sideframes to seat
using (4) 1 $\frac{3}{4}$ " chair bolts (A).
DO NOT TIGHTEN!!

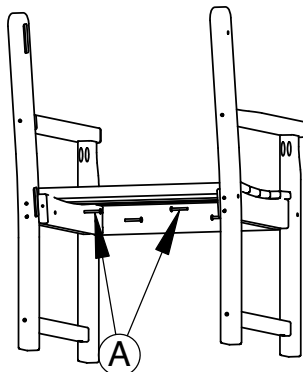


Step 2

- Attach sideframes to back
and seat using (6) 2 $\frac{1}{2}$ " screws (B)

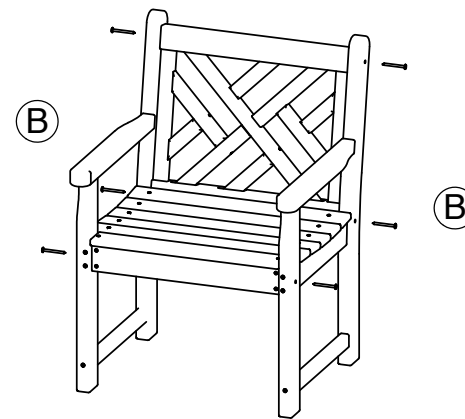


Step 3

Tighten the 1 $\frac{3}{4}$ " chair bolts
from Step 1

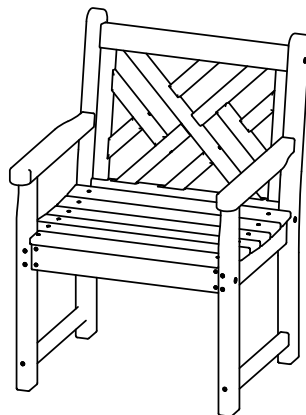

Qty.	Description
4	A - 1/4-20 X 1-3/4 WAFER SHCS
6	B - .27 X 2 1/2 SOCKET WAFER "A"





All Weather Furnishings

Join the POLYWOOD® Community

Share in the love of outdoor living, recycling, and more...



POLYWOOD



@POLYWOODINC



youtube.com/polywood



POLY-WORLD
Blog



POLYWOOD



To view our full warranty, please visit the warranty page on our website at
polywoodinc.com/resources.

If you have questions or concerns regarding assembly instructions or missing parts,
please contact us at (877) 457-3284 or email support@polywoodinc.com