



AMERICAN MADE FURNITURE

## **METTOWEE CHAIRSIDE TABLE**



Thank you for purchasing our Mettowee Chairside Table.  
Assembly of this product requires a Phillips screwdriver  
and a 7/16" wrench.

---

**STEP 1**

Read through these instructions thoroughly. We have found this to be of great value when first assembling this product.

**STEP 2**

Remove all parts and hardware from packing material. Place wooden parts on non-abrasive surface (like carpet or carton) to prevent damage to finish. Identify all parts using diagram at right.

**STEP 2**

- (A) Top
- (B) Shelf
- (C) Leg w/Hanger Bolt (4x)



---

**STEP 3**

Identify and count hardware using diagram at right.

Assembly of this product requires a Phillips screwdriver and a 7/16" wrench.

(4) *Metal Brackets*



(4) *1 1/2" #8 Screws*



(8) *1/2" #8 Screws*



(4) *Washers*



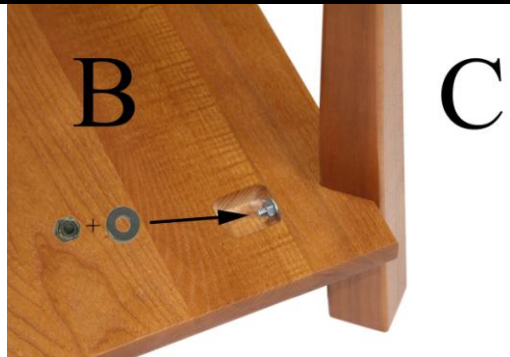
(4) *Lock Nuts*



---

**STEP 4**

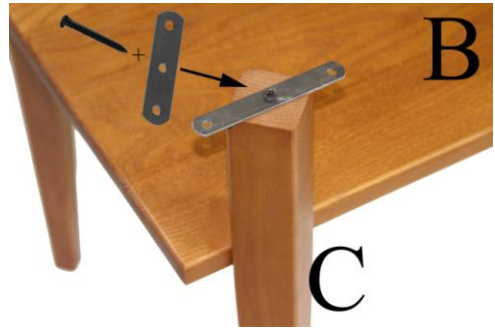
Attach Leg (C) to Shelf (B) by threading Leg attached hanger bolt through countersunk hole in Shelf (B) and into one of the predrilled holes along the edge of Shelf (B). Make sure predrilled hole in end of Leg (C) is facing down. Fasten with washer and lock nut as shown on right. Repeat this step until all four Legs (C) have been attached.



---

**STEP 5**

Turn assembled Legs (C) and Shelf (B) upright so that holes in the ends of each Leg (C) are now facing up.

**STEP 6**

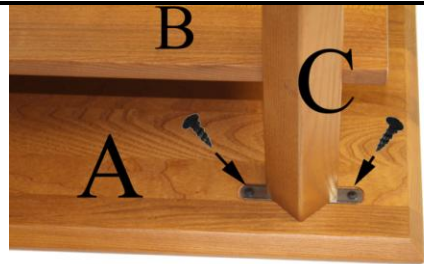
Attach Metal Bracket to the top of ALL Legs (C) by inserting 1 1/2" #8 Screws through center hole of Metal Brackets, and into predrilled hole in the top of Legs (C). Repeat for each Leg (C).

**Please Note:** Make sure Metal Brackets are parallel to Shelf (B) as shown on right before fully tightening the screw on all Metal Brackets.

---

**STEP 7**

Place Top (A) face down on non-abrasive surface (carpet or carton) so that the inlays and holes are facing up as shown in photo to the right.

**STEP 8**

Place assembled Legs (C) and Shelf (B) facing down on Top (A) where Metal Brackets insert into inlays on Top (A). Fasten 1/2" #8 Screws through Metal Bracket holes into predrilled holes on Top (A). Fully tighten all. Unit is complete.

---

**CARE**

Dust as needed with soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigment or silicone.



AMERICAN MADE FURNITURE

[www.manchesterwood.com](http://www.manchesterwood.com)

Product Support 1-800-660-6930

---