



AMERICAN MADE FURNITURE

MISSION BOOKCASE



Thank you for purchasing our Mission Bookcase. Assembly of this product requires a Phillips head screwdriver and a hammer. We have found it helpful to have a second person assist with assembly.

STEP 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

STEP 2

Remove all parts and hardware from packing material. Place wooden parts on non-abrasive surface (like carpet or carton) to prevent damage to finish. Identify all parts using diagram at right.

PARTS

- (2) Side Assemblies (A)
- (3) Fixed Shelves (B)
- (1) Top (C)

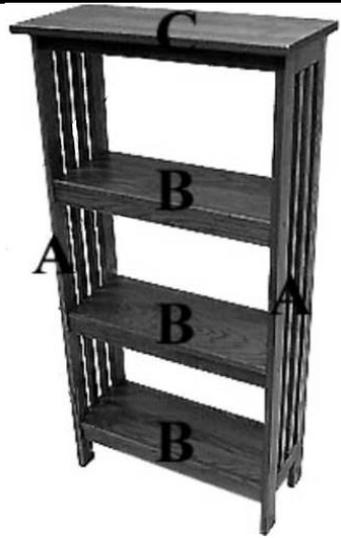

STEP 3

Identify and count hardware using diagram at right.

NOTE: Anti-tipping hardware packet is also included as an added safety option

- (16) 1-1/4" #8 Screws 
- (16) Wood Plugs 


STEP 4

Lay one side assembly on edge and attach one fixed shelf to bottom end with two 1 1/4" #8 screws. Thread screws into predrilled holes in side assembly and into edge of shelf. **DO NOT TIGHTEN SCREWS COMPLETELY AT THIS TIME.**




STEP 5

Repeat step 4 to attach remaining fixed shelves to first side assembly. **DO NOT TIGHTEN SCREWS COMPLETELY AT THIS TIME.**

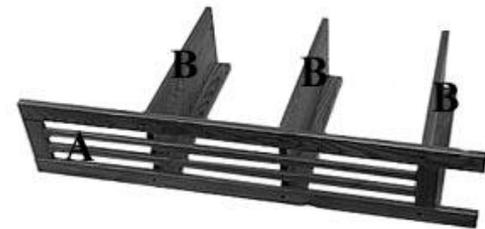

STEP 6

Attach second side assembly using same techniques as in STEPS 4 and 5. DO NOT TIGHTEN SCREWS COMPLETELY AT THIS TIME.

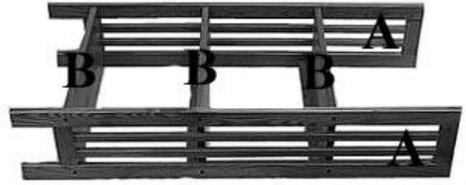**STEP 7**

Stand unit upright. Attach top of unit to side assemblies using four 1 1/4" #8 screws. Thread screws into predrilled holes in top of top shelf and into ends of side assemblies.




STEP 8

Tighten ALL screws.

STEP 9

Tap wooden plugs into holes in top and side assemblies with hammer to conceal screws.

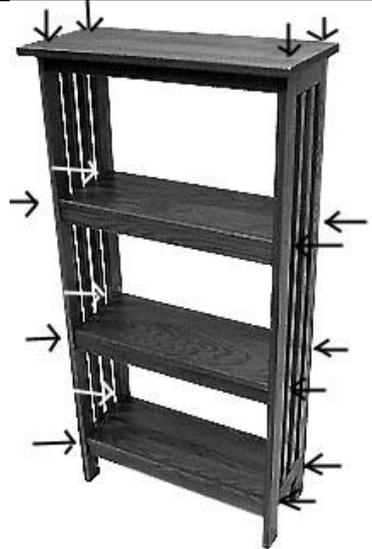

CARE

Dust as needed with soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigment or silicone.



AMERICAN MADE FURNITURE
www.manchesterwood.com

Product Support 1-800-660-6930
