

AMERICAN MADE FURNITURE

MISSION DESK



Thank you for purchasing our Mission Desk. Assembly of this product requires the use of a Phillips screwdriver and a hammer. We have found it helpful to have a second person assist with assembly.

STEP 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

STEP 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface (like the carton or carpet) to prevent damage to the finish.

STEP 3 - PARTS

- (A) Top Assembly 1
- (B) Side Assembly 2
- (C) Drawer 1
- (D) Cross Panel 1

STEP 4

Identify and count hardware using diagram at right.






STEP 5

Lay Top Assembly (A) upside down on a non-abrasive surface. Secure one Side Assembly (B) as shown on right with 4 1-1/4" #8 screws.


Note: Make sure predrilled holes half way up Side Assembly (B) is facing back of Top Assembly (A) as shown in diagram to right.

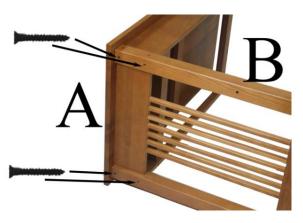

STEP 6


Turn and lay assembled Side Assembly (B) on non-abrasive surface with Top Assembly (A) facing up. Fasten second Side Assembly (B) securely to Top Assembly (A) as shown on right with 4 1-1/4" #8 screws.

Note: Make sure predrilled holes half way up Side Assembly (B) is facing back of Top Assembly (A) and is on same side as other Side Assembly (B).

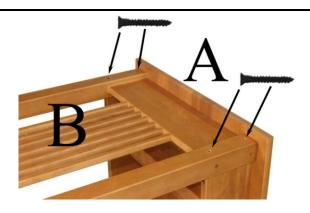


STEP 7

Lift unit upright with Side Assemblies (B) footed on ground. Attach Cross Panel (D) with remaining 2 1-1/4" #8 Screws. Secure on both sides.

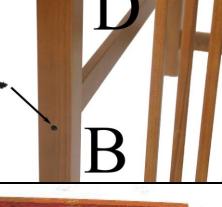

STEP 8

Attach Wooden Knobs to Drawer (C) using 2 1-1/8" Pan Screws

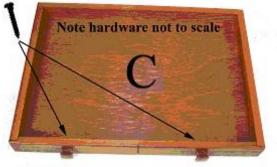

STEP 9

Lightly tap flush plugs into the holes in Side Assemblies that were used to assemble the unit.



CARE

Dust as needed with a soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigments or silicone.



AMERICAN MADE FURNITURE www.manchesterwood.com

Product Support 1-800-660-6930