



AMERICAN MADE FURNITURE

Mission End Table



Thank you for purchasing our Mission End Table. Assembly of this product requires a Phillips screwdriver and a hammer. We have found it helpful to have a second person present in at least one step of the assembly.

Read through these instructions thoroughly. We have found this to be of great value when first assembling this product.

Remove all parts and hardware from packing material. Place wooden parts on non-abrasive surface (like carpet or carton) to prevent damage to finish.


Assembly of this product requires a Phillips screwdriver and a hammer.

Identify and count hardware using diagram at right.



Identify all parts using diagram at right.

- 1 Top (A)
- 2 Side Assemblies (B)
- 1 Back Stretcher (C)
- 1 Drawer (D) (Shown Below)
- 1 Bottom Shelf (E)
- 1 Front Cleat (F)

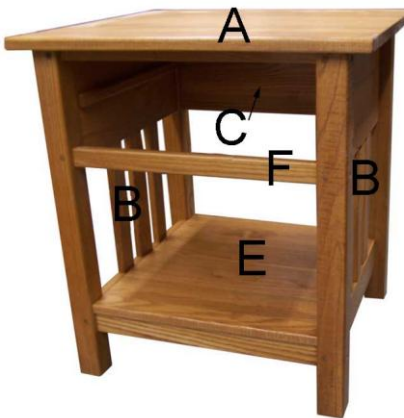

STEP 1

Attach Bottom Shelf (E) to Side Assembly (B) using two 1-3/4" screws inserting them through the Side Assembly (B) then into the predrilled holes in cleats.




STEP 2

Attach Front Cleat (F) to Side Assembly (B) using one 1-3/4" screw inserting it through Side Assembly (B) then into the predrilled hole in cleat.



STEP 3

Attach Back Stretcher (C) to Side Assembly (B) using two 1-3/4" screws inserting them through the Side Assembly (B) then into the predrilled holes in Back Stretcher (C). Note slot of bracket (indicated here by black line).

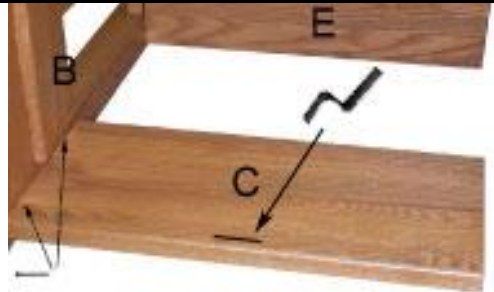

Repeat steps 3-5 to attach second Side Assembly. Leaving screws loose to fit easier onto Top.


STEP 4

Lay Top (A) on non-abrasive surface (like cardboard or carpet) so surface doesn't get damaged. The cleat is the front of the unit.



STEP 5

Turn pre-assembled Side Assemblies (B) over and attach to Top (A) using two 1-3/4" screws inserting them through the Side Assemblies (B) then into the predrilled holes in the top Cleat and tighten screws.

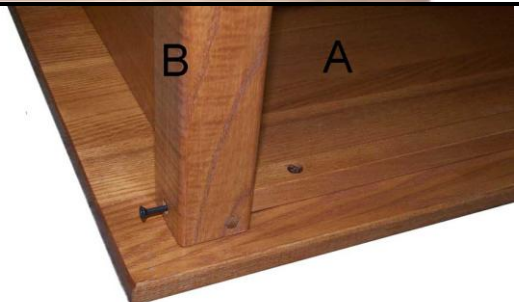


STEP 6

Line the brackets into the slot and over predrilled holes in the Top (A) and attach using five 1/2" pan screws.




STEP 7

Attach Drawer Knob to Drawer (D) by inserting through hole in Drawer (D) and securing with Pan Screw provided.

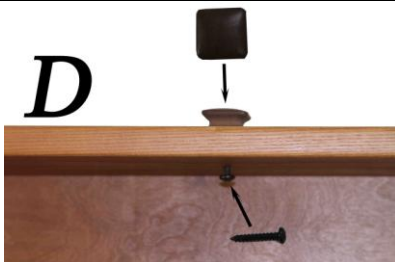

STEP 8

Slide Drawer (D) into cabinet. Attach Drawer Stops to Drawer (D) inserting two 1" #6 screws through Drawer Stop then into predrilled holes in the bottom of Drawer (D).

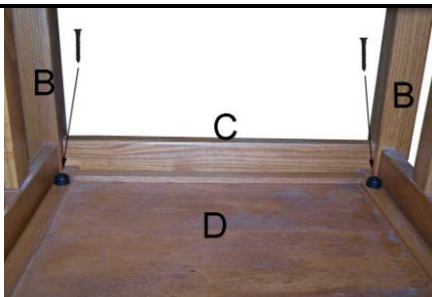

STEP 9

Turn unit over with assistance from another person if necessary. Insert flush plugs to cover screws in Side Assemblies (B) and tap lightly into place.



CARE

Dust as needed with soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigment or silicone.



AMERICAN MADE FURNITURE

www.manchesterwood.com

Product Support 1 800 660 6930
