

CHAIRSIDE NESTING TABLES SET OF 2



Thank you for purchasing our Chairside Nesting Set. Assembly of this product requires a 7/16" wrench.

STEP 1

Read through these instructions thoroughly. We have found this to be of great value when first assembling this product.

STEP 2


Remove all parts and hardware from packing material. Place wooden parts on non-abrasive surface (like carpet or carton) to prevent damage to finish. Identify all parts using diagram at right.

STEP 3

- (A) Top 2
- (B) Leg 8

STEP 4

Identify and count hardware using diagram at right.

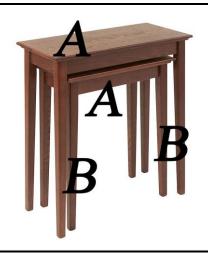


(8) 1 3/4" Lag Bolt

(8) Washer




STEP 5

Match shorter legs with smaller top. Place Top (A) facedown on a nonabrasive surface (like carpet or carton). Align Legs (B) as shown on right with predrilled hole facing into Top (A).



STEP 6

Attach Legs (B) to Tops (A) by threading lag bolts with a washer through metal bracket on Tops (A) into the predrilled hole in the Legs (B). Turn until fully secure with 7/16" wrench.

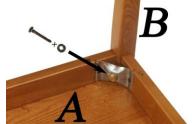

CARE

Dust as needed with soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigment or silicone.



www.manchesterwood.com
Product Support 1-800-660-6930