



AMERICAN MADE FURNITURE

SHAKER DESK



Thank you for purchasing our Shaker Desk. Assembly of this product requires the use of a 7/16" wrench or an adjustable wrench and a Phillips screwdriver. We have found it helpful to have second person assist with assembly.

STEP 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

STEP 2


Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface (like the carton or carpet) to prevent damage to the finish.

STEP 3

Identify all parts using diagram at right

STEP 4

Identify and count hardware using diagram at right.

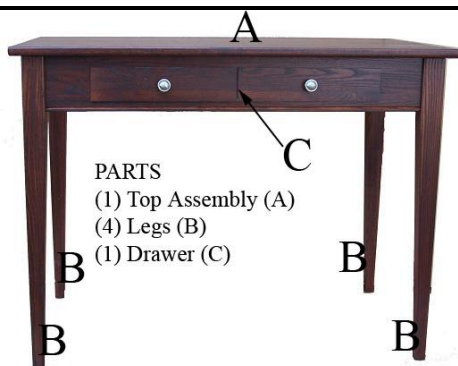

PARTS

- (1) Top Assembly (A)
- (4) Legs (B)
- (1) Drawer (C)

(4) 1 3/4" Lag Bolts



(4) Washers



(2) Pewter Knobs



(2) 1-1/4" Pull Screws




Note hardware not to scale.

STEP 5

Lay Top Assembly (A) upside down on a non-abrasive surface.


STEP 6

Place a Washer on each Lag Bolt. Align hole in Leg (B) with hole in corner of Top Assembly (A). Attach Leg (B) to Top Assembly (A) by inserting (1) Lag Bolt through corner bracket of Top Assembly (A) and into predrilled hole in Leg (B). Tighten with a wrench. Repeat this step for each Leg (B).

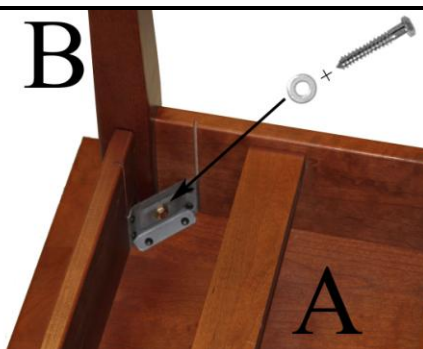


STEP 7

Attach Pewter Knobs to Drawer (C) by threading 1-1/4" Pull Screw through predrilled hole in Drawer (C) and into Drawer Pull. Tighten with a Phillips screwdriver.

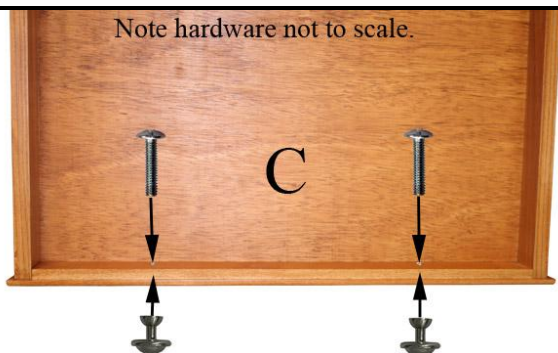

STEP 8

Turn desk upright onto its legs and insert Drawer (C) into opening in Top Assembly (A).

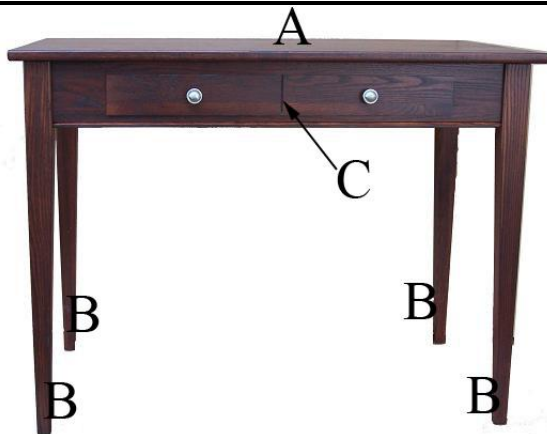

CARE

Dust as needed with a soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigments or silicone.



AMERICAN MADE FURNITURE
www.manchesterwood.com

Product Support 1-800-660-6930
