



AMERICAN MADE FURNITURE

TUCK AWAY TABLE




Thank you for purchasing the Tuck Away Table. We have included these instructions in order to help guide you in assembly. You will need a Philips head screwdriver and a hammer.

Identify and count hardware using the diagram below, as well as review the parts of the item on right.

(8) 1 1/4" #8 Screws



(4) Wood Plugs

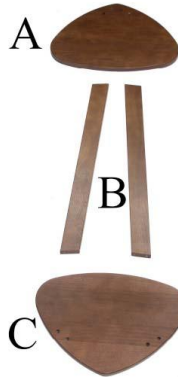


A - Top (1)
B - Uprights (2)
C - Base (1)

note: Base (C) is smaller than Top (A)


STEP 1

Lay out Uprights (B) as shown on right with bottom of Uprights (B) angling upward toward the "point" of the Base (C).

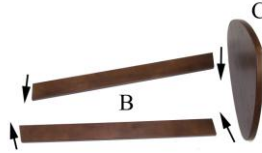


STEP 2

Attach Uprights (B) using two 1 1/4" screws on either side as shown on right. Be sure angles are facing upward towards the point of Base (B) as prepared in Step 1. Fully tighten all screws.

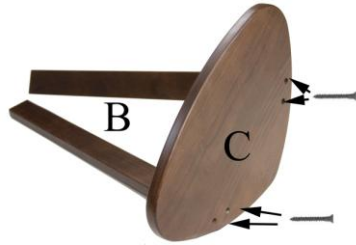


STEP 3

Place unit upwards resting on the Base (C) and attach Top (A) to top end of Uprights (B) as shown on right using remaining 1 1/4" screws. Fully tighten all screws.

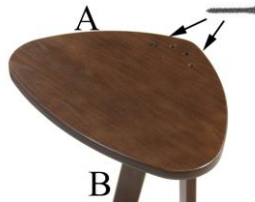

STEP 4

Tap the flush plugs provided into Top (A) screw holes with hammer. Gently tap until flush with the Top (A). Unit is complete.

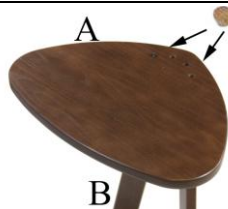

CARE

Dust as needed with a soft cloth. Clean with damp cloth and mild solution of dish soap. Polish with soft cloth and polish that contains no pigments or silicone.



AMERICAN MADE FURNITURE

www.manchesterwood.com

Product Support 1 800 660 6930