




All Weather Furnishings



Model: RKCB72

- ___ (1) Hardware pack
- ___ (2) Sideframes
- ___ (1) Back assembly
- ___ (1) Seat assembly

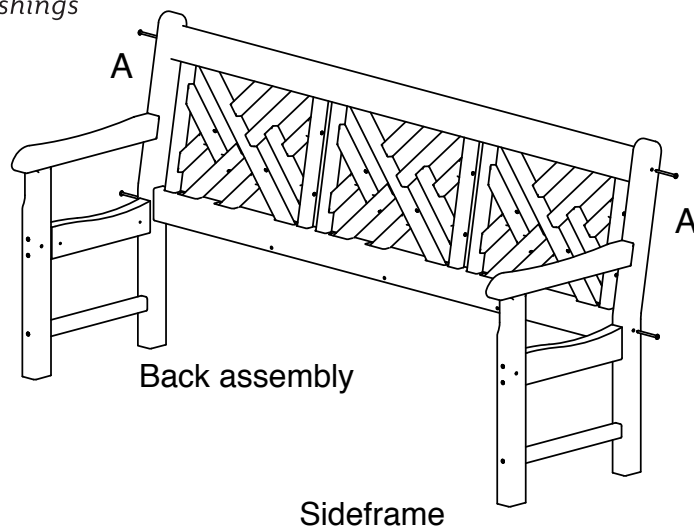

Step 2

Attach front of seat assembly to sideframes using (2) 3" chair screws in pre-drilled holes

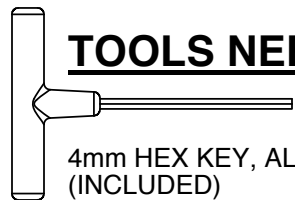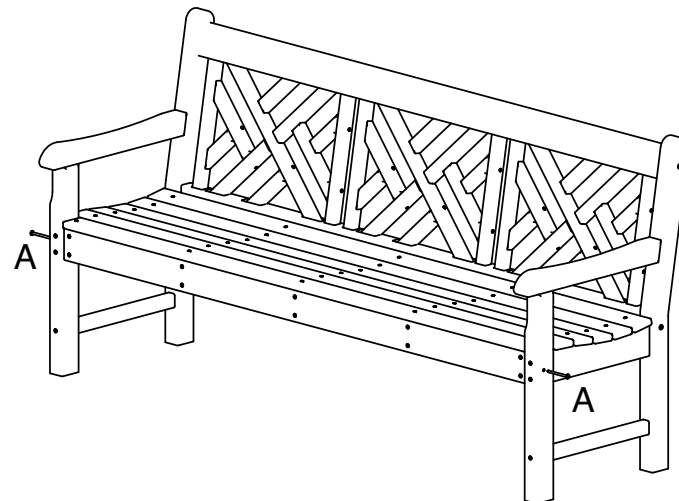


TOOLS NEEDED

4mm HEX KEY, ALLEN, T-HANDLE
(INCLUDED)


Step 3

Secure the bottom of the Back assembly to the back of the Seat assembly using (3) 3" chair screws in pre-drilled holes

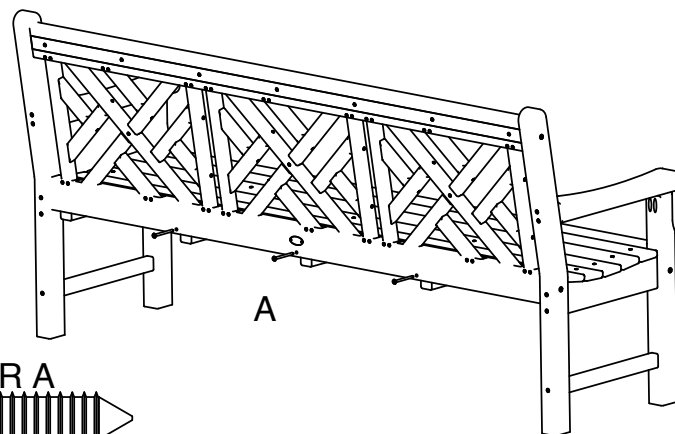

Step 4

Attach seat assembly to sideframes using (4) 2 1/2" screws in pre-drilled holes

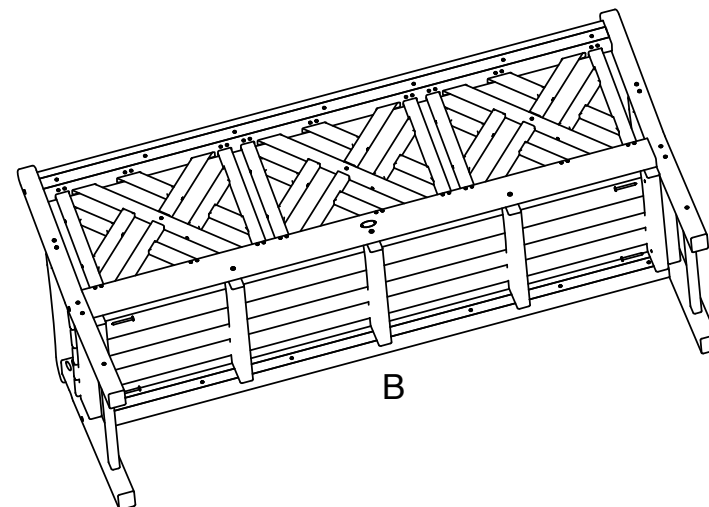

Qty.	Description
9	A - .27 X 3 SOCKET WAFER A
4	B - .27 X 2-1/2 SOCKET WAFER A





All Weather Furnishings

Join the POLYWOOD® Community

Share in the love of outdoor living, recycling, and more...



POLYWOOD



@POLYWOODINC



youtube.com/polywood



POLY-WORLD
Blog



POLYWOOD



To view our full warranty, please visit the warranty page on our website at
polywoodinc.com/resources.

If you have questions or concerns regarding assembly instructions or missing parts,
please contact us at (877) 457-3284 or email support@polywoodinc.com