



All Weather Furnishings

Model: SBT18, SBT26



Step 1

Attach sideframes to table top
using (4) 2" screws

Step 2

Attach braces to sideframes
using (4) 2" screws

- (1) Table top
- (2) Sideframes
- (2) Braces
- (1) Hardware pack

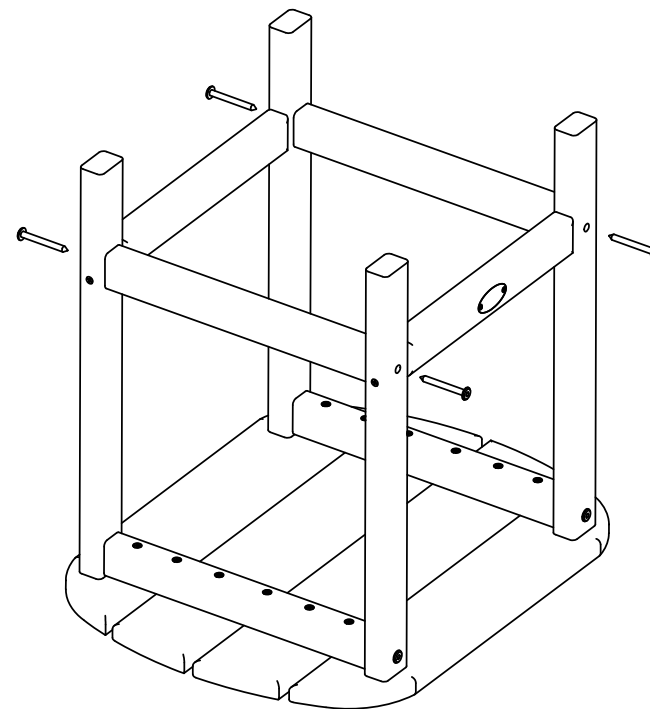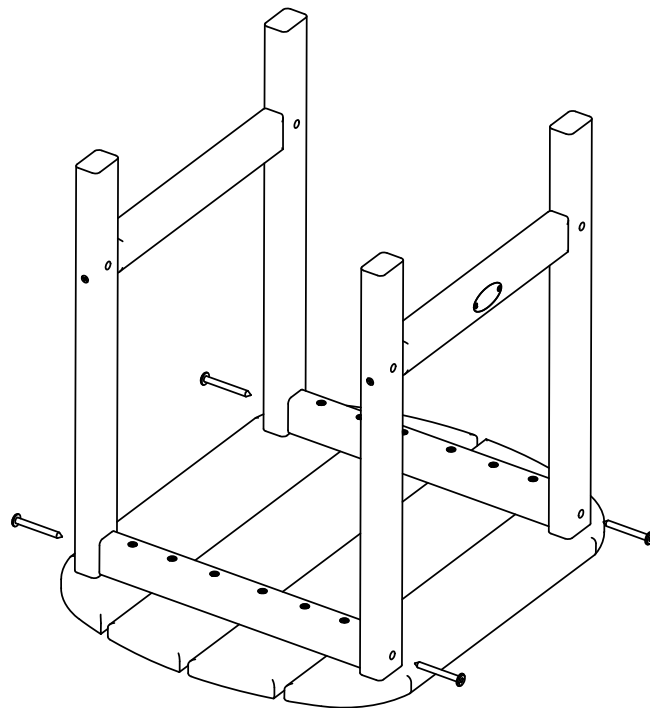


TOOLS NEEDED



4mm HEX KEY, ALLEN, T-HANDLE
(INCLUDED)

Qty.	Description
8	A - .27 X 2 SOCKET WAFER A





All Weather Furnishings

Join the POLYWOOD® Community

Share in the love of outdoor living, recycling, and more...



POLYWOOD



@POLYWOODINC



youtube.com/polywood



POLY-WORLD
Blog



POLYWOOD



To view our full warranty, please visit the warranty page on our website at
polywoodinc.com/resources.

If you have questions or concerns regarding assembly instructions or missing parts,
please contact us at (877) 457-3284 or email support@polywoodinc.com